



# F1500CONV and F1200CONV Instruction Sheet

Use this kit to replace the 2504B solenoid valve on F1500 (5 gallon) and F1200 (12 gallon) foam markers. To successfully update your foam marker, all the components included in the kit must be used. Carefully follow the pictures and instructions listed below. If you have any questions please contact us at 717-738-7350.


F1500 with old valve

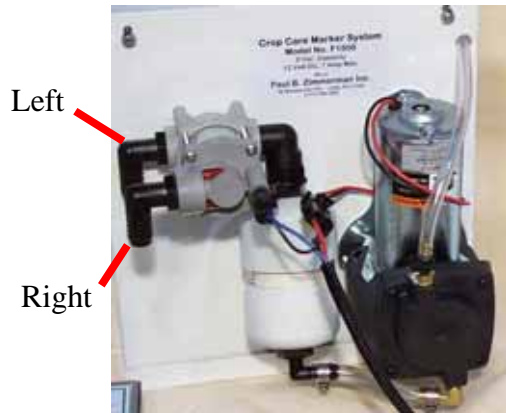

F1200 with old valve

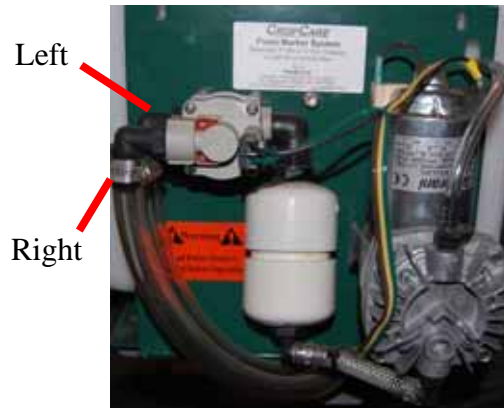

1. Remove the 5/8" discharge hoses from the hose barb elbows on the old solenoid. Be sure to mark which one is left and right.
2. Remove the 3/8" hose from the hose barb elbow on the bottom of the compressor.
3. Unplug the wire from the solenoid and then remove the 4 screws that attach the solenoid to the marker frame. The entire solenoid and mixing chamber should now be removed. This will not be used again.
4. Attach the new conversion kit by bolting the metal bracket to the two top holes where the old solenoid valve was attached.
5. Attach the 5/8" discharge hose to the hose barb elbows. Make sure the left and right hoses are correct.
6. Attach the 3/8" hose to the hose barb elbow on the bottom of the compressor.
7. Plug the wiring harness into the new solenoid valve.  
Note: There is a short wire extension included with the **F1200CONV** kit. This is not included in the **F1500CONV** kit.

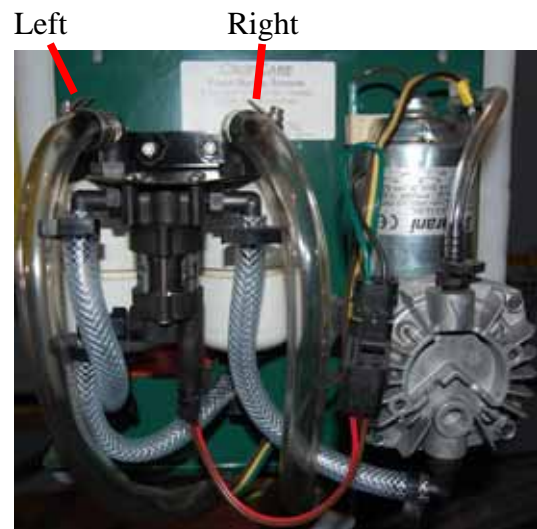

Completed F1200. The F1500 will look identical except for the wire harness extension which is not used on a F1500.

## CROPCARE

PaulB LLC | 50 Woodcorner Road | Lititz PA 17543 | (717) 738-7350  
www.CropCareEquipment.com